
## **OJAI R30 DRILL TEMPLATE & INSTALLATION INSTRUCTIONS**

1 **Print out this instructional PDF.** Make sure to print at **100% size**. To ensure accuracy use a ruler to confirm this scale is one inch:




(2) Cut out the Ojai R30 Drill Template below.

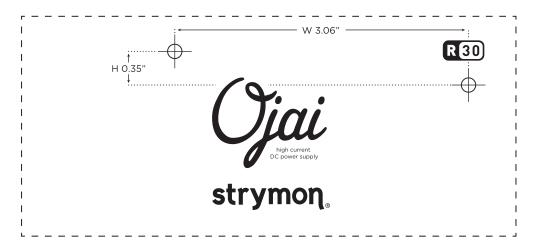

3 **Choose your mounting location.** Tape the **Drill Template**, logo side up, in the location you want to install your Ojai R30.

This illustration shows mounting to the top of your pedalboard. To mount Ojai R30 to the bottom of your pedalboard, turn the pedalboard over before placing the Drill Template logo side up in the location you want to install your Ojai R30.

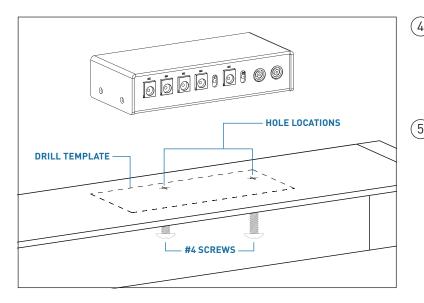

- (4) Drill holes. Drill through the two marked hole locations with a 1/8" (3mm) bit. Remove the drilling template.
- (5) Attach Ojai R30. Place the Ojai R30 over the holes. Install from the reverse side of your pedalboard using the provided #4 screws (3/8").